

SUBMITTAL RECORD

JOB _____
 LOCATION _____
 SUBMITTED TO _____
 SUBMITTAL PREPARED BY _____
 APPROVED BY _____
 DATE _____



Submittal Form

90° Angle Bracket with Drive Pin

DESCRIPTION

The 90° Bracket with Drive Pin comes in 4 different lengths. Complete system includes looped wire and bracket with pre-assembled drive pin. It quickly and easily attaches to concrete, steel or composite metal decking.

WARNINGS

ALWAYS CONFIRM ENGAGEMENT OF CABLE LOCK ON WIRE BEFORE APPLYING THE LOAD: By pushing the adjustment pin in the opposite direction of the arrows on the cable lock and then pulling the cable also in the opposite direction of the arrows on the cable lock.

PULL ADJUSTMENT PIN BACK AND PASS WIRE ROPE THROUGH RIZE CABLE LOCK: Failure to pull adjustment pin first may cause damage to serrated teeth and reduce holding capacity.

TO ENSURE HANGING SYSTEM INTEGRITY AND SAFETY: Use only Rize wire rope. **WORKING LOAD LIMIT (WLL) MUST FALL WITHIN THE STATED WORKING LOAD RANGE OF THE CABLE LOCK:** Each product is load rated and incorporates a minimum safety factor of 5:1. This WLL takes into account the specification criteria of the Rize Cable Lock and the wire rope.

DO NOT USE ON COATED WIRE ROPE: It is important to maintain the metal to metal contact between the locking pawls in the Kwik-Loc and the wire rope.

SPRAY PAINTING: of the Rize Suspension Hanging System **after** installation is acceptable, at the installing contractor's discretion, **if** the installing contractor physically confirms engagement of each cable lock on the cable prior to and after painting, and in strict accordance with the Rize Installation Instructions. Brush painting is not acceptable. Do not paint Cable or Cable Lock prior to installation. Do not reposition Cable Lock after painting.

DO NOT APPLY LUBRICANT: to any part of the assembly as this will alter the surface nature of the wire rope and attract dirt and debris.

DO NOT USE FOR LIFTING: (Under Hook slings) This product is designed for static load applications only.

KEEP THE PRODUCT CLEAN AND FREE FROM DIRT: Any dirt should be removed from the product prior to assembly.

INSPECT PERIODICALLY: Upon inspection, discard and replace if worn, distorted, or damaged.


REMOVE DAMAGED WIRE ENDS: Using a designated pair of wire rope cutters prior to inserting into the Rize Kwik-Loc.

WHEN INSTALLING RIZE KWIK-LOC CABLE ATTACHMENTS: to buildings or equipment careful consideration must be made to the attachment method and the material being attached to. It is the responsibility of the installer for the proper selection, installation and appropriateness of the attachment to the job specifications and any codes. Rize can give general guidance, but any questions regarding this should ultimately be directed to the project engineer of the job.

FOR DRY LOCATIONS ONLY

DO NOT USE IN CHLORINATED ATMOSPHERES SUCH AS POOLS AND NATATORIUM

GYMNASIUM INSTALLS MUST BE USING LOCKING CABLE LOCKS ONLY

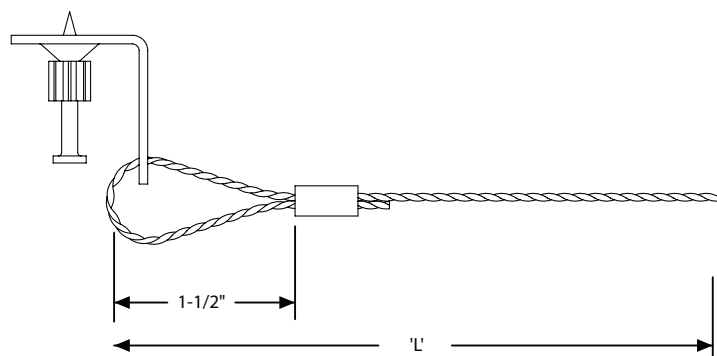

Please see our Rize testing and warnings webpage for the most detailed list of warnings:
<http://rizellc.com/techsupport-testing.html>

Item #	Code	Description	Qty
30300	ADP90-05RWC2	Angle Bracket w/ Drive Pin - 5ft RWC2 Cable Assembly	50/Ctn
30301	ADP90-10RWC2	Angle Bracket w/ Drive Pin - 10ft RWC2 Cable Assembly	100/Ctn
30302	ADP90-15RWC2	Angle Bracket w/ Drive Pin - 15ft RWC2 Cable Assembly	100/Ctn
30303	ADP90-25RWC2	Angle Bracket w/ Drive Pin - 25ft RWC2 Cable Assembly	100/Ctn

Rize Enterprises, LLC

PO Box 1311 Brentwood, NY 11717

Tel: 631-930-7532 Fax: 631-249-8976

www.rizellc.com



©2021 Rize Enterprises
 Printed in USA 5/17/2021
 ROZ00113